



# ZF-401 STANDARD MODEL PORCELAIN URINAL INSTALLATION INSTRUCTIONS

**Before installing your urinal, ensure:**


- **There is no trap downstream of the fixture connection point**
- **The drain line is clear and free flowing**
- **There is no copper pipe drainage immediately downstream of the urinal**

**1.**




Install a 50mm PVC drain at 390mm to centre of pipe from FINISHED floor level. The pipe should extend 30mm through finished wall

**2.**

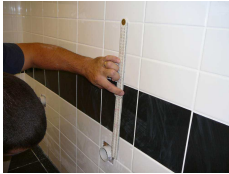


Measure 570mm from centre of waste pipe to centre of urinal bracket and mark wall.

**3.**



Install the wall bracket. Ensure the bracket is centred above the drain outlet and level on the wall.

**4.**




Connect the reducing Fernco onto the urinal and tighten, ensuring access to hose clamp after urinal is installed

**5.**




Carefully hang the urinal on the bracket, levering the Fernco onto the waste pipe outlet. Ensure Fernco does not become pinched

**6.**




Tighten the Fernco onto the 50mm PVC pipe and perform a water test by pouring a bucket of water into the urinal. Ensure water flows away freely

**7.**




After checking for leaks, complete installation by securing base of urinal and sealing around the bowl with sanitary grade silicone

**8.**



Complete installation by commissioning the unit ready for use. Follow the instructions for the commissioning of a ZeroFlush Urinal

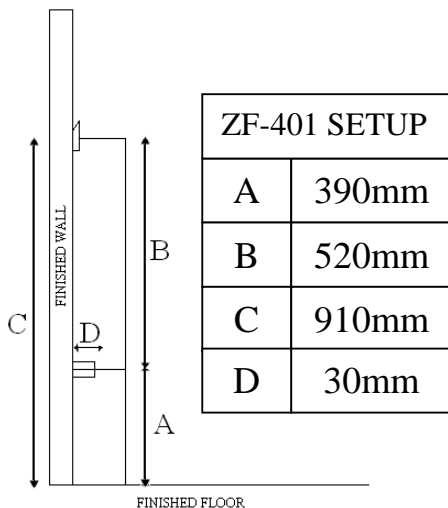

IN THIS BOX	
Trap Insert	
Fernco	
Trap Key	
Odour Barrier	
ZF-401	
Instructions	

